


PARTS DIAGRAM

50-114 4" x 36" BELT / 8" DISC SANDER

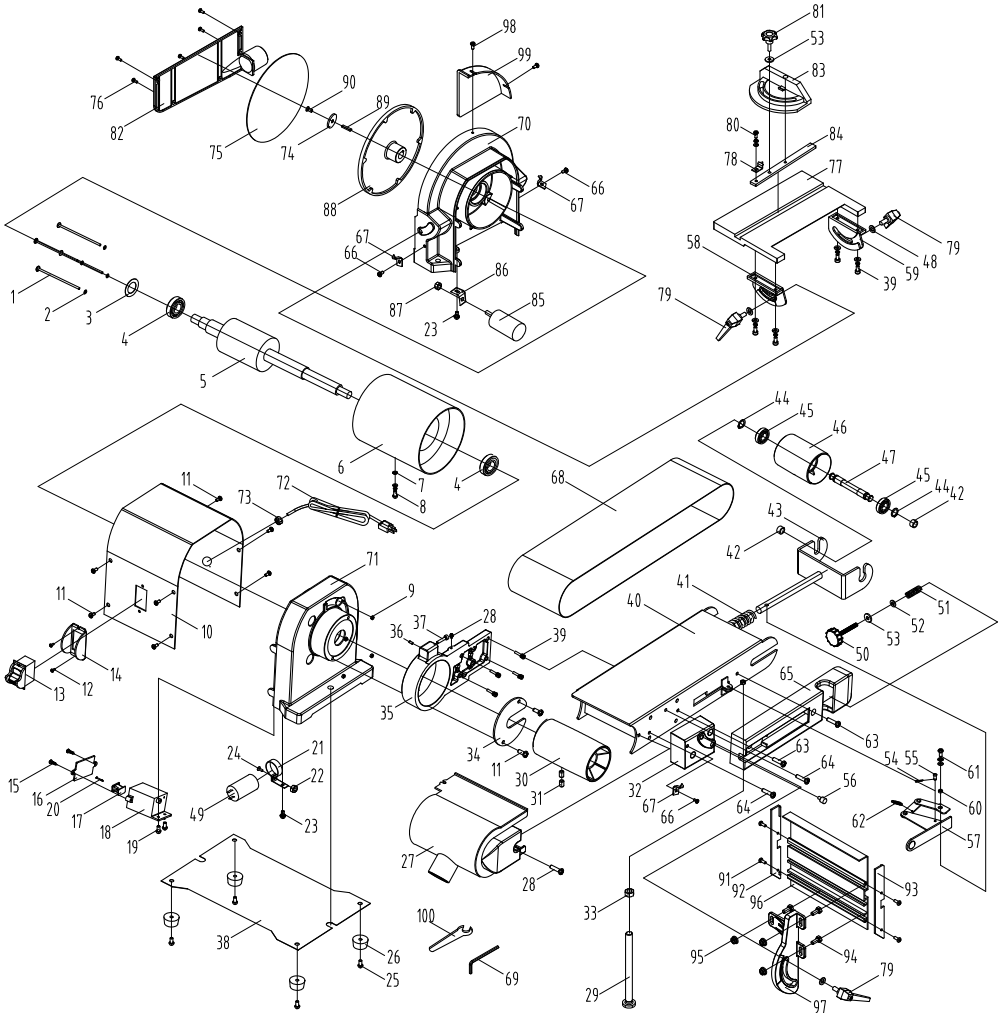

NOTE: Please reference the Manufacturer's Part Number when calling for Replacement Parts.

For Parts under Warranty,
the Serial Number of your machine is required.

PARTS LIST 1 of 2

KEY NO.	DESCRIPTION	QTY	MFG. PART NO.	KEY NO.	DESCRIPTION	QTY	MFG. PART NO.
1	Phillips Screw M5x305	4	P50-114-1	26	Rubber Foot	4	P50-114-26
2	Flat Washer 5	4	P50-114-2	27	Belt Dust Port	1	P50-114-27
3	Wave Washer D40	1	P50-114-3	28	Phillips Screw+Flat Washer M5x25	2	P50-114-28
4	Bearing 6203RZ	2	P50-114-4	29	Belt Sander Support Rod	1	P50-114-29
5	Rotor	1	P50-114-5	30	Driven Pulley	1	P50-114-30
6	Stator	1	P50-114-6	31	Inner Hex Screw M8x8	2	P50-114-31
7	Locking Washer 4	1	P50-114-7	32	Fixed Block	1	P50-114-32
8	Phillips Screw+Spring Washer+Flat Washer M4x8	1	P50-114-8	33	Hex Nut M10	1	P50-114-33
9	Hex Nut M5	4	P50-114-9	34	Baffle Plate	1	P50-114-34
10	Housing	1	P50-114-10	35	Belt Frame Connect	1	P50-114-35
11	Phillips Screw M5x10	10	P50-114-11	36	Fixed Pin	1	P50-114-36
12	Phillips Screw M3x10	2	P50-114-12	37	Inner Hex Screw M6x25	1	P50-114-37
13	Switch	1	P50-114-13	38	Base Plate M5x16	1	P50-114-38
14	Switch Plate	1	P50-114-14	39	Inner Hex Screw+Flat Washer M6x12	8	P50-114-39
15	Phillips Screw ST4.2x10	2	P50-114-15	40	Support Assembly	1	P50-114-40
16	Relay Box Cover	1	P50-114-16	41	Press Spring	1	P50-114-41
17	Relay	1	P50-114-17	42	Sleeve	2	P50-114-42
18	Relay Box	1	P50-114-18	43	Guide Frame	1	P50-114-43
19	Phillips Screw M4x10	2	P50-114-19	44	Spring Washer D12	2	P50-114-44
20	Phillips Screw ST4.2x28	1	P50-114-20	45	Bearing 6001-2RS	2	P50-114-45
21	Capacitor Support	1	P50-114-21	46	Idle Pulley	1	P50-114-46
22	Hex Flange Nut M4	1	P50-114-22	47	Idle Shaft	1	P50-114-47
23	Phillips Screw+Spring Washer+Flat Washer M4x10	2	P50-114-23	48	Flat Washer D8	3	P50-114-48
24	Phillips Screw M4x10	1	P50-114-24	49	Capacitor 100µF125V	1	P50-114-49
25	Phillips Screw+Spring Washer+Flat Washer M5x12	4	P50-114-25	50	Belt Adjusting Knob	1	P50-114-50

NOTE: Please reference the Manufacturer's Part Number when calling for Replacement Parts.

For Parts under Warranty, the Serial Number of your machine is required.

PARTS LIST 2 of 2

Page	KEY NO.	DESCRIPTION	QTY	MFG. PART NO.	KEY NO.	DESCRIPTION	QTY	MFG. PART NO.
22	51	Adjusting Spring	1	P50-114-51	76	Phillips Screw+Flat Washer M4x8	5	P50-114-76
	52	Rubber Washer	1	P50-114-52	77	Disc Work Table	1	P50-114-77
	53	Big Flat Washer D6	2	P50-114-53	78	Miter Gauge Pointer	1	P50-114-78
	54	Cotter Pin 2x10	1	P50-114-54	79	Knob	3	P50-114-79
	55	Pin 5x10	1	P50-114-55	80	Phillips Screw+Spring Washer+Flat Washer M5x8	1	P50-114-80
	56	Fix Shaft	1	P50-114-56	81	Miter Gauge Knob	1	P50-114-81
	57	Tension Handle	1	P50-114-57	82	Disc Dust Port	1	P50-114-82
	58	Disc Right Support	1	P50-114-58	83	Miter Gauge	1	P50-114-83
	59	Disc Left Support	1	P50-114-59	84	Miter Gauge Bar	1	P50-114-84
	60	Sleeve	1	P50-114-60	85	Capacitor 20µF300V	1	P50-114-85
	61	Phillips Screw+Lock Washer+Big Flat Washer M5x16	1	P50-114-61	86	Capacitor Support	1	P50-114-86
	62	Pull Spring	1	P50-114-62	87	Hex Nut M8	1	P50-114-87
	63	Phillips Screw M5x25	2	P50-114-63	88	Disc Plate	1	P50-114-88
	64	Phillips Screw M5x16	2	P50-114-64	89	Flat Key C4.8*15	1	P50-114-89
	65	Belt Cover	1	P50-114-65	90	Phillips Screw M6*16left	1	P50-114-90
	66	Phillips Screw+Spring Washer+Flat Washer M4x8	3	P50-114-66	91	Phillips Screw 3.5*9.5	4	P50-114-91
	67	Pointer	3	P50-114-67	92	Left Table Baffle Plate	1	P50-114-92
	68	Belt	1	P50-114-68	93	Right Table Baffle Plate	1	P50-114-93
	69	Wrench S5	1	P50-114-69	94	Hex Bolt M6*14	3	P50-114-94
	70	Left End Cap	1	P50-114-70	95	Hex Flange Nut M6	3	P50-114-95
	71	Right End Cap	1	P50-114-71	96	Belt Work Table	1	P50-114-96
	72	Plug	1	P50-114-72	97	Work Table Support	1	P50-114-97
	73	Strain Relief 6P4	1	P50-114-73	98	Phillips Screw+Flat Washer M4x8	2	P50-114-98
	74	Disc Washer	1	P50-114-74	99	Disc Cover	1	P50-114-99
	75	Disc Paper	1	P50-114-75	100	Open End Wrench	1	P50-114-100

NOTE: Please reference the Manufacturer's Part Number when calling for Replacement Parts.

For Parts under Warranty, the Serial Number of your machine is required.