




98-2600

PRO ADJUSTABLE SAWHORSES

Set of 2

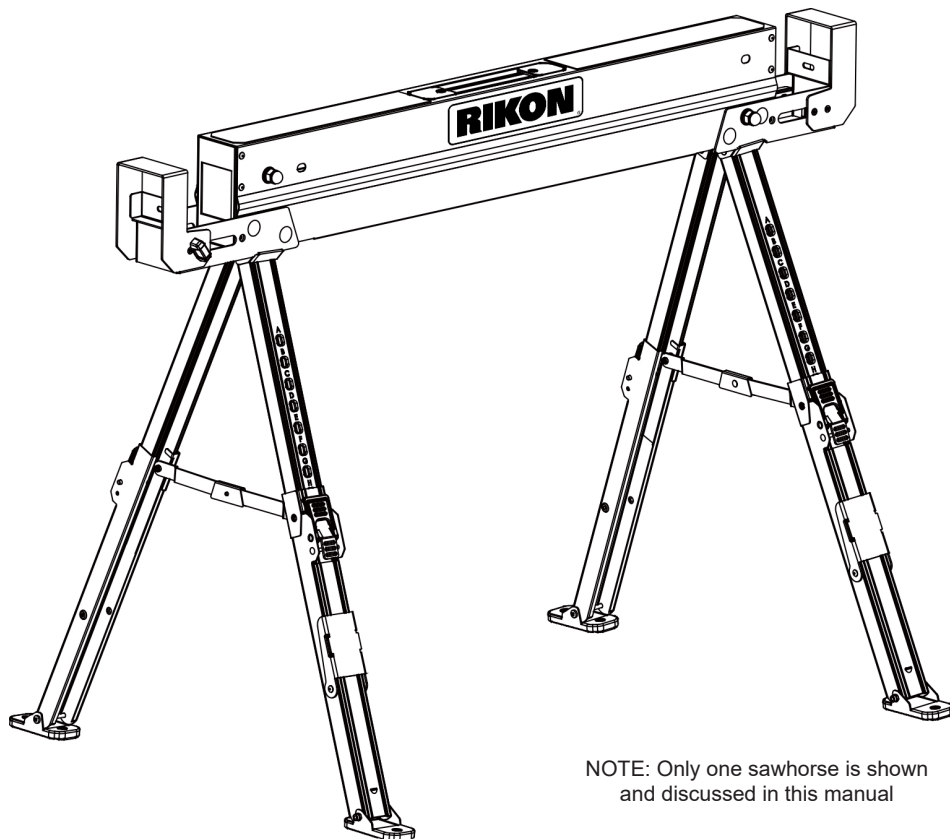

NOTE: Only one sawhorse is shown and discussed in this manual

Operator's Manual

Date of purchase: _____

For technical support or parts questions, email techsupport@rikontools.com
or call toll free at (877) 884-5167.

98-2600M1

www.rikontools.com

SAFETY INFORMATION

FOR YOUR SAFETY, PLEASE ENSURE YOU READ THESE INSTRUCTIONS CAREFULLY BEFORE USE, AND KEEP THESE INSTRUCTIONS IN THE WORK SPACE WHERE THE SAWHORSE WILL BE USED AT ALL TIMES.

SAFE OPERATION AND USE OF THIS SAWHORSE

1. When lifting the sawhorse use proper lifting techniques to avoid personal injury.
2. Ensure work area is well-lit while working.
3. Ensure sawhorse is standing on a level surface that is clear, dry and free of debris.
4. Ensure all 4 legs have solid contact with the floor. If the sawhorse is not positioned level and straight, loads placed upon it could fall, potentially causing damage to the item(s) loaded on it, and possible severe personal injury.
5. Ensure the load placed on any sawhorse does not exceed the applicable Safe Working Load Rating. Over loading can lead to failure of the sawhorse, potentially causing damage to the item(s) loaded on it, and possibly severe personal injury.
6. Never stack sawhorses to obtain extra height.

Caution:

Do not apply weight in excess of 1,300 lbs (590 kg) per sawhorse of uniformly distributed load.

Do not use as a step ladder or standing platform.

The weight should be distributed evenly on the top rail.

The amount of weight that can be applied to 2 identical sawhorses is double this value.


For example, a pallet or skid weighing not more than two times the Safe Working Load Rating can be safely carried by 2 of these sawhorses.

 **WARNING! TO REDUCE THE RISK OF PERSONAL INJURY, USER MUST READ AND UNDERSTAND OPERATOR'S MANUAL.**


- **LEGS MUST BE LOCKED OPEN.**
- **DO NOT STAND ON SAWHORSE.**
- **DO NOT OVERLOAD.**
- **MAXIMUM CAPACITY 1,300LBS (590KG) PER SAWHORSE.**
- **USE ONLY ON A FLAT, DRY, HARD AND LEVEL SURFACE.**

SET-UP INSTRUCTIONS


1. Sawhorse in folded/carry position.

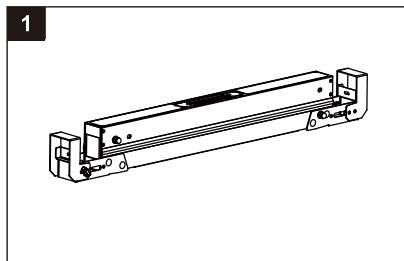


2. Above location labeled "OPEN 1st", press release button and pull down the legs.

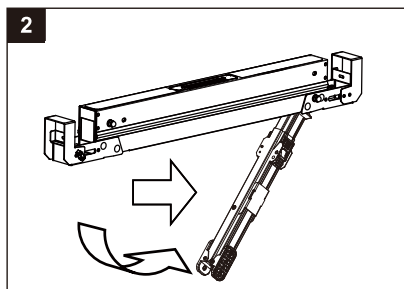

3. Separate legs and push cross brace flat.

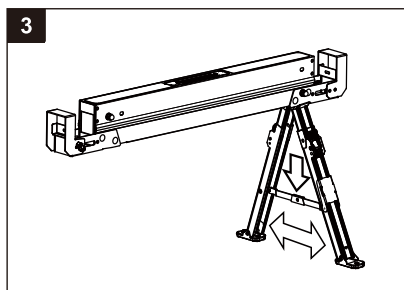


4. Above location labeled "CLOSE 1st", press release button and fold down the legs.

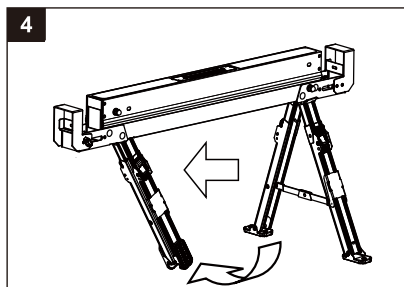


SET-UP INSTRUCTIONS


5. Separate legs and push cross brace flat.

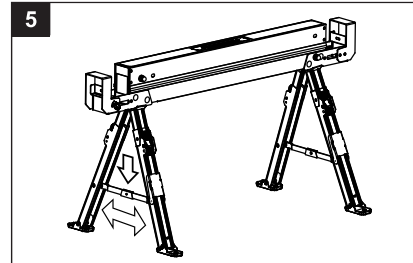


6. Legs adjust in increments of 1 inch. To extend, pull legs down until latch is locked at desired position. To retract, press lock button, pull legs down slightly then push leg up.

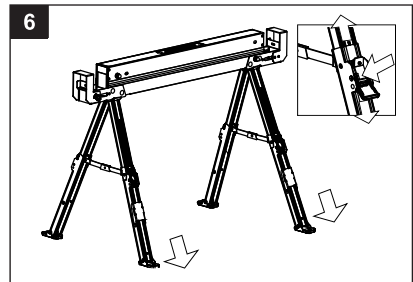

7. Please loosen the knob and adjust the bracket to the required width and tighten the knob. The range is from 40mm to 90mm to fit different size of timber beam / joist.

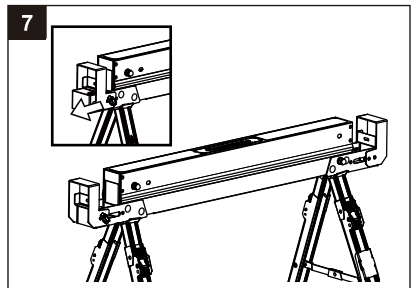


8. When paired together with a second unit and properly joined by beams/joists in the support arms, a work table can support up to 2600 lbs. (1180 kg).

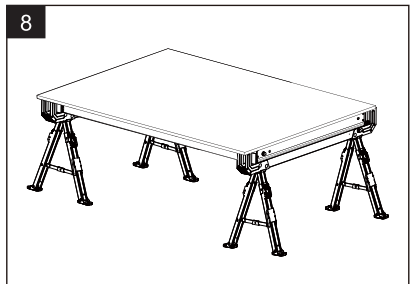

HOW TO CLOSE

1. To close, reverse steps 5 through 2, starting with leg 2.
2. Be sure locking pin engages main housing to keep legs secure while in folded/carry position.

PAGE SIZE 210mm X 140mm

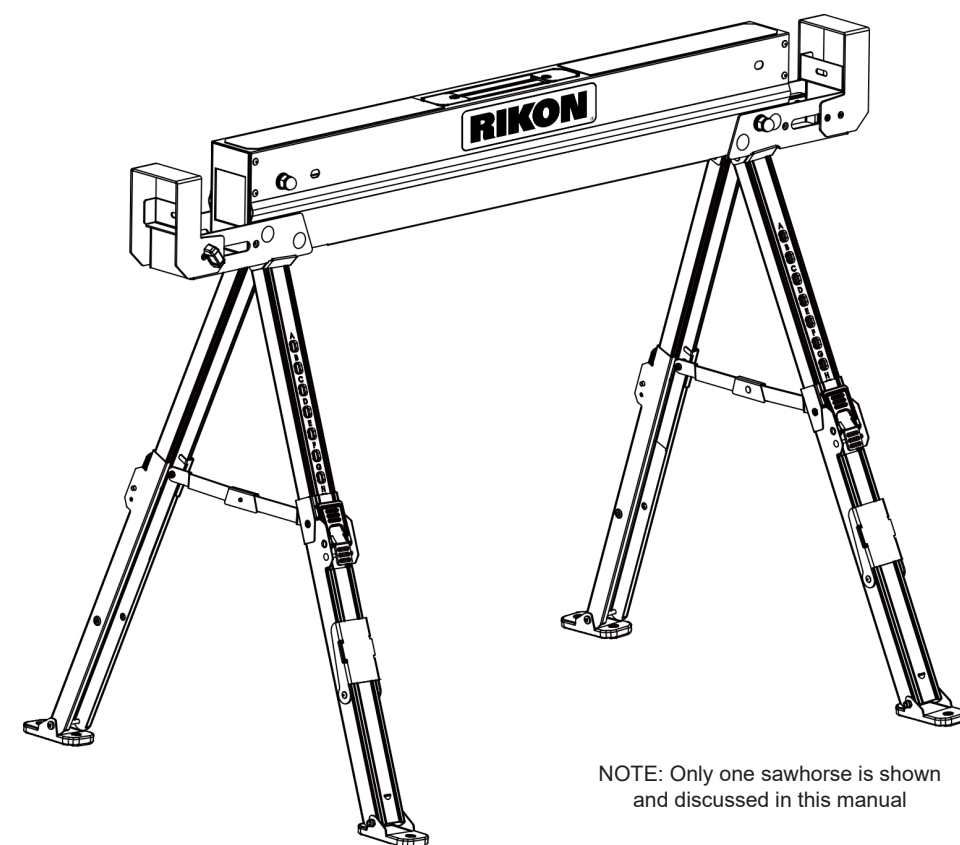RIKON**98-2600****PRO ADJUSTABLE SAWHORSES****Set of 2**

NOTE: Only one sawhorse is shown and discussed in this manual

Operator's Manual

Date of purchase: _____

For technical support or parts questions, email techsupport@rikontools.com
or call toll free at (877) 884-5167.

98-2600M1**www.rikontools.com****SAFETY INFORMATION**

FOR YOUR SAFETY, PLEASE ENSURE YOU READ THESE INSTRUCTIONS CAREFULLY BEFORE USE, AND KEEP THESE INSTRUCTIONS IN THE WORK SPACE WHERE THE SAWHORSE WILL BE USED AT ALL TIMES.

SAFE OPERATION AND USE OF THIS SAWHORSE

1. When lifting the sawhorse use proper lifting techniques to avoid personal injury.
2. Ensure work area is well-lit while working.
3. Ensure sawhorse is standing on a level surface that is clear, dry and free of debris.
4. Ensure all 4 legs have solid contact with the floor. If the sawhorse is not positioned level and straight, loads placed upon it could fall, potentially causing damage to the item(s) loaded on it, and possible severe personal injury.

5. Ensure the load placed on any sawhorse does not exceed the applicable Safe Working Load Rating. Over loading can lead to failure of the sawhorse, potentially causing damage to the item(s) loaded on it, and possibly severe personal injury.

6. Never stack sawhorses to obtain extra height.

Caution:

Do not apply weight in excess of 1,300 lbs (590 kg) per sawhorse of uniformly distributed load.

Do not use as a step ladder or standing platform.

The weight should be distributed evenly on the top rail.

The amount of weight that can be applied to 2 identical sawhorses is double this value. For example, a pallet or skid weighing not more than two times the Safe Working Load Rating can be safely carried by 2 of these sawhorses.


WARNING! TO REDUCE THE RISK OF PERSONAL INJURY, USER MUST READ AND UNDERSTAND OPERATOR'S MANUAL.

- LEGS MUST BE LOCKED OPEN.
- DO NOT STAND ON SAWHORSE.
- DO NOT OVERLOAD.
- MAXIMUM CAPACITY 1,300LBS (590KG) PER SAWHORSE.
- USE ONLY ON A FLAT, DRY, HARD AND LEVEL SURFACE.


2

SET-UP INSTRUCTIONS


1. Sawhorse in folded/carry position.

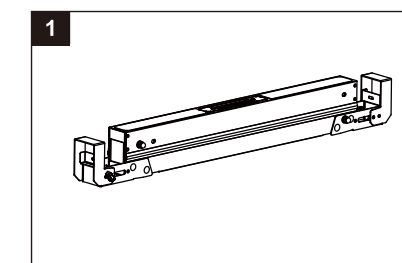


2. Above location labeled "OPEN 1st", press release button and pull down the legs.

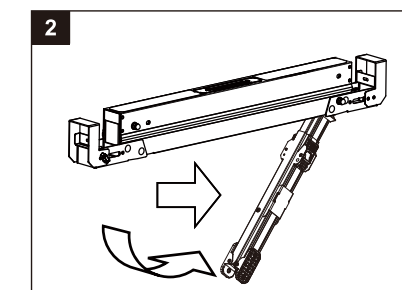

3. Separate legs and push cross brace flat.

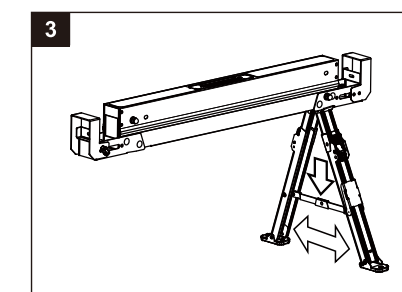


4. Above location labeled "CLOSE 1st", press release button and fold down the legs.

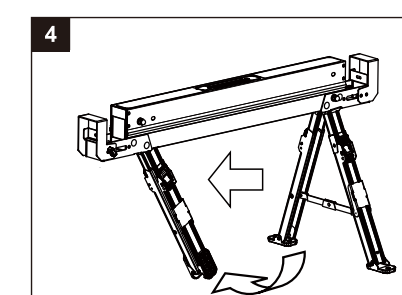


3

SET-UP INSTRUCTIONS


5. Separate legs and push cross brace flat.

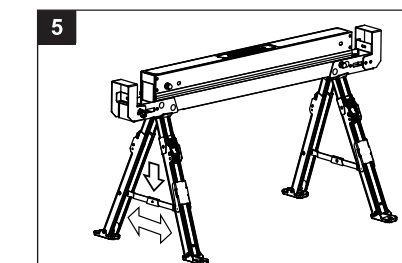


6. Legs adjust in increments of 1 inch. To extend, pull legs down until latch is locked at desired position. To retract, press lock button, pull legs down slightly then push leg up.

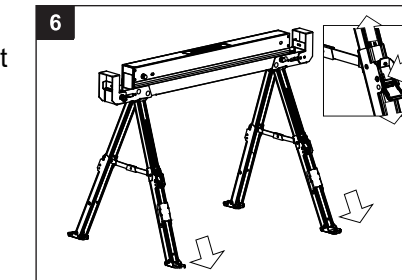

7. Please loosen the knob and adjust the bracket to the required width and tighten the knob. The range is from 40mm to 90mm to fit different size of timber beam / joist.

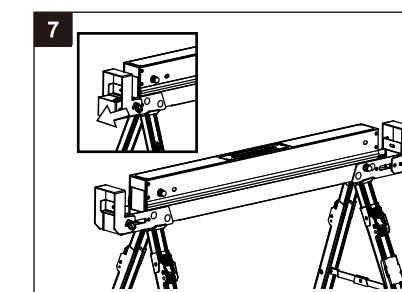

8. When paired together with a second unit and properly joined by beams/joists in the support arms, a work table can support up to 2600 lbs. (1180 kg).

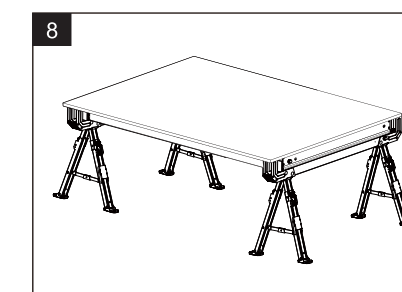**HOW TO CLOSE**

1. To close, reverse steps 5 through 2, starting with leg 2.
2. Be sure locking pin engages main housing to keep legs secure while in folded/carry position.

4