



### MOBILITY KIT ASSEMBLY DIAGRAM FOR 10-325 BANDSAW

#### Tools Required for Assembly

- 13mm or Adjustable Wrench
- Pliers

**\*NOTE:** Depending on the age of your Bandsaw, the base may not have been pre-drilled for installing the rear wheel shaft.

To make the two shaft holes, a 9/16" HSS twist drill is required. Drill the holes per the following dimensions in the base, at the column side if the machine.

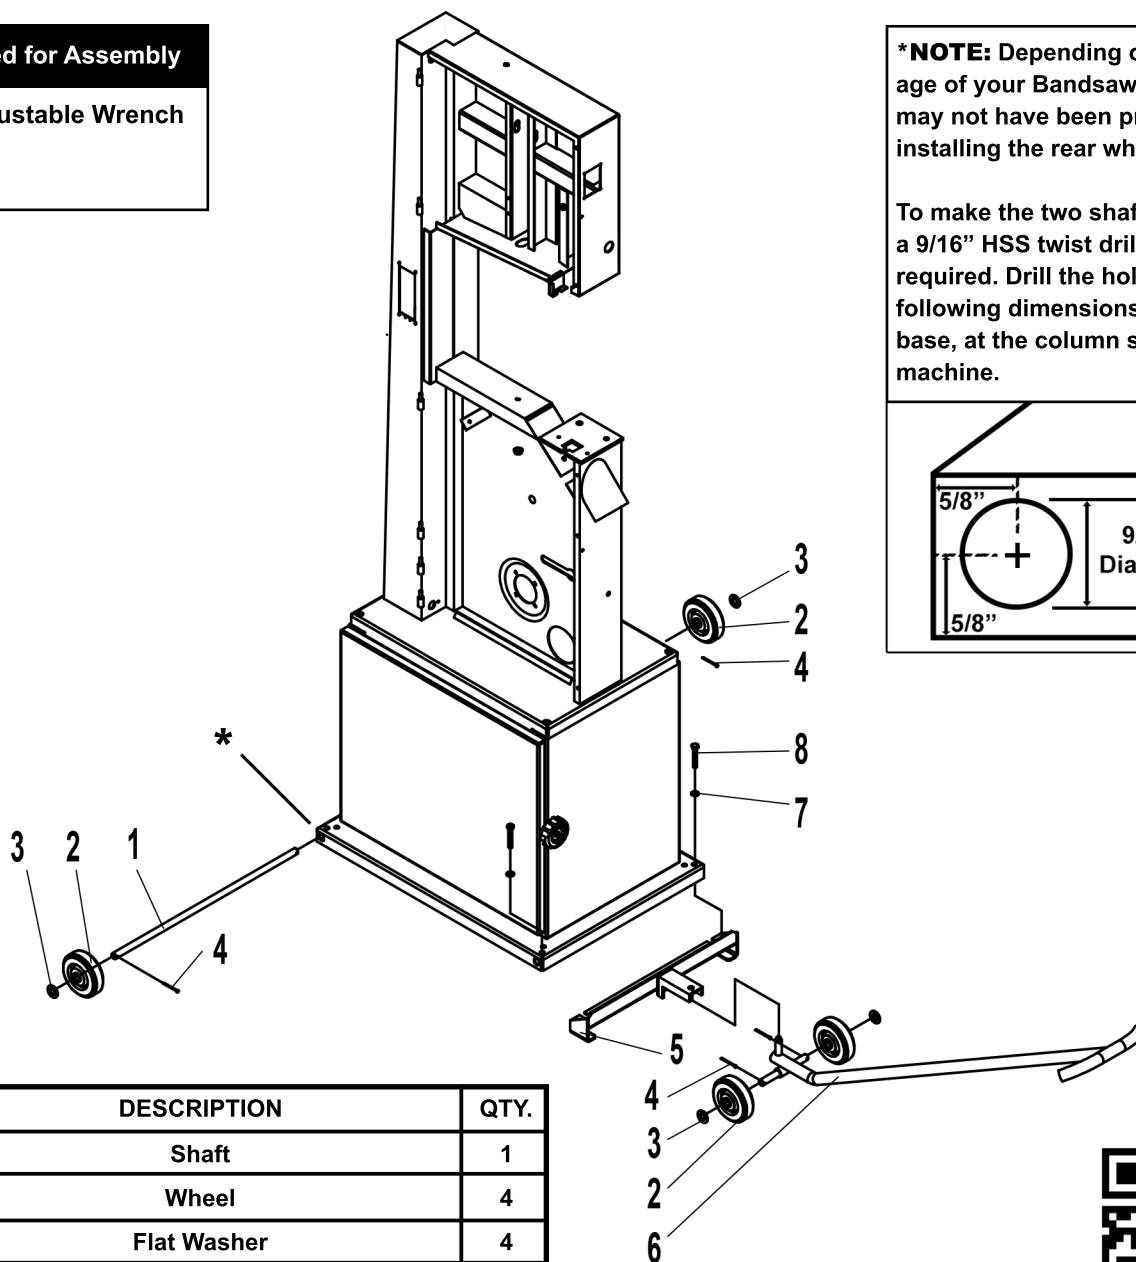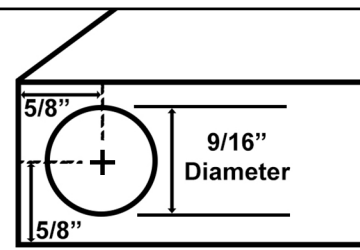

KEY NO.	DESCRIPTION	QTY.
1	Shaft	1
2	Wheel	4
3	Flat Washer	4
4	Split Cotter Pin	4
5	Bracket	1
6	Tow Bar Assembly	1
7	Flat Washer	2
8	Hex Bolt	2



#### California Prop 65 Warning

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.